

 
# DV-5580Z

## Quick guide



 
## GETTING TO KNOW YOUR AGFAPHOTO DV-5580Z

### Front View

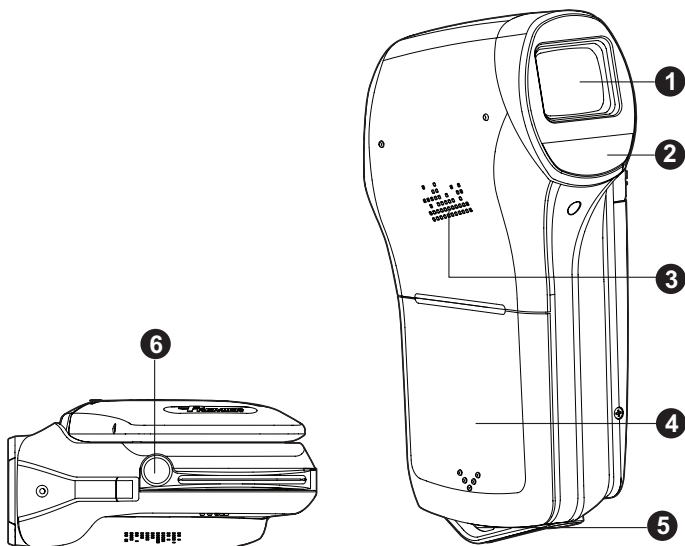

- 1. Lens
- 2. LED assist light
- 3. Speaker
- 4. Battery cover
- 5. Strap holder
- 6. Tripod mount

## Rear View

 
 
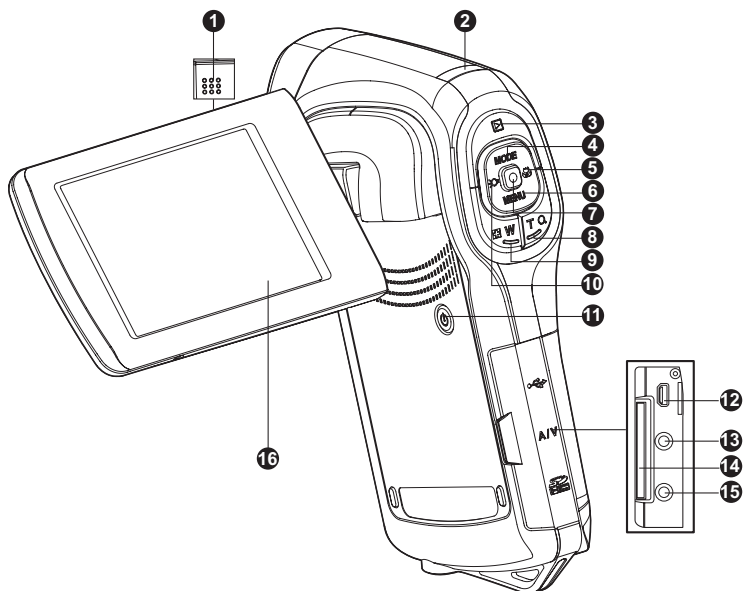 


- |                                  |   |
|----------------------------------|---|
| 1. Microphone                    | 9.  W Zoom out (wide-angle) button / Thumbnail button |
| 2. Status LED                    | 10.  Left button                                      |
| 3.  Play button                  | Assist light button                                   |
| 4.  Up button                    | 11.  Power button                                     |
| <b>MODE</b> Mode button          | 12. USB or AV OUT terminal                            |
| 5.  Right button                 | 13. HDTV terminal                                     |
| Focus button                     | 14. SD/SDHC memory card slot                          |
| 6.  Down button                  | 15. Earphone jack                                     |
| <b>MENU</b> Menu button          | 16. LCD monitor                                       |
| 7.  OK / Record / Shutter button |   |
| 8.  Zoom in (telephoto) button   |   |

## GETTING STARTED



### Preparation

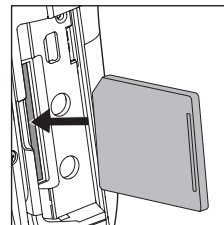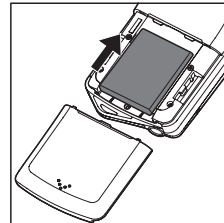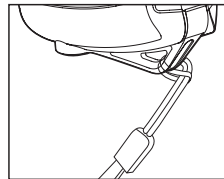 
1. Attach the camera strap.
  2. Open the battery cover.
- 
3. Insert the supplied battery with correct orientation as shown. (Label side to the back)
    - Close the battery cover and make sure it is locked securely.
  4. Insert an SD/SDHC memory card.
    - The digital video camera does not have a built-in memory and cannot operate without an SD/SDHC memory card inserted. Make sure to insert an SD/SDHC memory card before use.
    - Open the SD card slot cover carefully.
    - Insert an SD/SDHC memory card (optional) into the card slot.
    - Close the cover and make sure it is locked securely.
    - Be sure to format the SD/SDHC memory card with this video camera before its initial usage.



### Turning the Power On/Off

Load the battery and insert an SD/SDHC memory card before starting.


 

- Press the  button until the digital video camera turns on.
- To turn the power off, press the  button again.

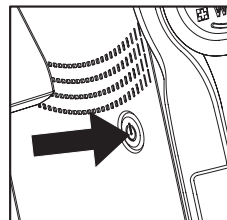

## CAPTURE MODE



Your digital video camera is equipped with a 2.5" full color LTPS LCD monitor to help you capture/playback images and video clips or adjust menu settings.

### Recording Video Clips

1. Press the  button until the digital video camera turns on.
  - The default mode is Video Mode.
2. Compose the image on the LCD monitor.
3. Press the  button to start recording.
4. To stop recording, press the  button.
  - The recording time depends on the storage media size and the subject to be recorded.



### Capturing Still Images












1. Press the  button until the digital video camera turns on.
2. Press the **MODE** button to switch to capture mode.
3. Compose the image on the LCD monitor.
4. Press the  button to capture the image.

 


## PLAYBACK MODE




 




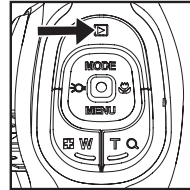 



You can play back all the recorded files on the LCD monitor.

### Playing Back Video Clips

1. Press the  button.
  - The last recorded file appears on the LCD monitor.
2. Select the desired video clip with the  () /  () buttons.
3. Press the  button to start video playback.
  - To pause video playback, press the  button.
  - To cancel pause, press the  button again.
  - To adjust the volume, use the  **W** / **T**  buttons.
4. To stop video playback, press the  (**MENU**) button and return to the start of the video clip.












### Playing Back Still Images

1. Press the  button.
  - The last recorded file appears on the LCD monitor.
2. Select the desired image with the  () /  () buttons.
3. Press the **T**  button to adjust the zoom ratio.
  - The magnification factor is displayed on the LCD monitor.
4. To view a different section of the image, press the  (**MODE**) /  (**MENU**) /  () /  () buttons to adjust the display area.



## Deleting Images/Video Clips



1. Press the  button.
2. Select the file you wish to delete with the  () /  () buttons.
3. Press the **MENU** button.
4. Select [Delete File] or [Delete All] with the  (**MODE**) /  (**MENU**) buttons and press the  button.
  - [Delete File]: Deletes the current file.
  - [Delete All]: Deletes all files.
5. Select [Yes] to delete. Select [No] to cancel.
6. Press the  button to confirm.

 


## AUDIO MODE







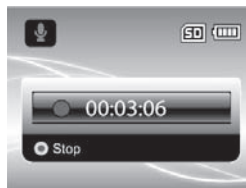



### Recording Audio Files

 
The digital video camera enables you to record and playback audio files anytime and anywhere.

1. Press the **MODE** button to switch to audio mode.
2. Press the  button to start audio recording.
  - To stop recording, press the  button.



### Playing Back Audio Files

1. Press the  button.
2. Select the desired audio clip with the  () /  () buttons.
3. Press the  button to begin playback.
  - To pause, press the  button again.
  - To stop playback, press the  (**MENU**) button.
  - To adjust the volume, use the  **W** / **T**  buttons.

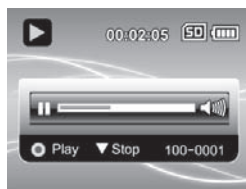



## **INSTALLING THE SOFTWARE**

1. Make sure you have Windows Media Player 9 or QuickTime 7.0 installed on your computer first.
2. Install the decoder program (available in the CD).
  - H.264 files can be played back with Windows Media Player 9. (Decoder is designed for H.264 decode)

MP4/H.264 playback system requirements:

- At least 512MB of RAM
- 64MB or higher video card
- Windows 2000 Service Pack 4 or XP or Vista 32 or Vista 64
- DirectX 9.0b or higher
- Audio format 48KHz HE-AAC or AAC

<b>Resolution</b>	<b>fps</b>	<b>CPU requirements</b>
640 x 480	30 fps	2.4 GHz Intel Pentium 4 or higher
1280 x 720	30 fps	3.2 GHz Intel Pentium D (dual-core) or higher
1440 x 1080	30 fps	Core 2 Duo 2.0 & 128MB independent memory for image display

## **Customer care**

More information on the complete AgfaPhoto digital camera product range can be found at [www.plawa.com](http://www.plawa.com) and [www.plawausa.com](http://www.plawausa.com).

**Service & Repair (USA/ Canada):**

1-866 475 2605

[www.plawausa.com](http://www.plawausa.com)

**Support Service (USA/ Canada)**

[support-apdc@plawausa.com](mailto:support-apdc@plawausa.com)

**Service & Repair Hotline (EU):**

00800 752 921 00 (from a landline only)

**Service & Support Hotline (Germany):**

0900 1000 042 (1.49 euros/min. from a German landline only)

**Online Service / International contact:**

[support-apdc@plawa.com](mailto:support-apdc@plawa.com)

**Manufactured by**

plawa-feinwerktechnik GmbH & Co. KG

Bleichereistraße 18

73066 Uhingen

Germany

AgfaPhoto is used under license of Agfa-Gevaert NV & Co. KG. Agfa-Gevaert NV & Co. KG. does not manufacture this product or provide any product warranty or support. For service, support and warranty information, contact the distributor or manufacturer. Contact: AgfaPhoto Holding GmbH, [www.agfaphoto.com](http://www.agfaphoto.com)



## **Disposal of Waste Equipment by Users in Private Households in the European Union**

This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

## **FCC Compliance and Advisory**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1.) this device may not cause harmful interference, and 2.) this device must accept any interference received, including interference that may cause unsatisfactory operation. This equipment has been tested and found to comply with the limits for a Class B peripheral, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. When shielded interface cables have been provided with the product or when specified additional components or accessories have elsewhere been designated to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulations.